



## Bush Installation on Pottery Wheels-No. 3, 5 & 6 - $\frac{3}{4}$ " and 1" shafts.

1. Once wheelhead removed, remove old bronze bush from bearing housing and replace with new bush, using a smear of Loctite 262 on outside of bush if loose.
2. Place O ring over the bearing housing on top.
3. In the wheel head remove the old fibre, metal, fibre washers and replace in that order with new ones.
4. Apply a light grease on the wheel head shaft and in the bearing bushes
5. Push the wheel head into the housing and turn entire wheel upside down, placing a folded towel under wheel head to hold in position.
6. Remove excess grease from shaft
7. Place second lot of fibre, metal and fibre washers over shaft.
8. Place drive wheel over shaft and push down against the drive wheel
9. Lock drive wheel onto shaft