

venco

www.venco.com.au

NO.3 CONE DRIVE POTTERY WHEEL



Claycore Pty Ltd

47 Newbey St

Milpara, WA 6330


ABN: 69 634 757 029

PLEASE READ THESE SAFETY INSTRUCTIONS CAREFULLY

- ⚠ USE WITH RCD PROTECTED OUTLETS ONLY. IF YOU ARE UNSURE ASK AN ELECTRICIAN OR USE A STAND -ALONE PLUG-IN SAFETY SWITCH.
- ⚠ DO NOT OPERATE ELECTRICAL SWITCHES WITH WET HANDS.
- ⚠ ENSURE WHEEL IS SWITCHED OFF AND UNPLUGGED FROM POWER SOURCE BEFORE CLEANING OR MAINTENANCE AND AFTER OPERATION.
- ⚠ NEVER TAMPER WITH ANY OF THE ELECTRICAL COMPONENTS OF THE WHEEL AS THERE IS A RISK OF AN ELECTRIC SHOCK.
- ⚠ TO CLEAN THE WHEEL, USE A WET SPONGE. DO NOT USE A PRESSURISED WATER SOURCE IN THE VICINITY OF THE MACHINE eg. GARDEN HOSE.
- ⚠ DO NOT BLOCK OFF DRAINAGE SPOUT AS THIS COULD RESULT IN WATER INGRESS TO THE MOTOR.
- ⚠ THIS WHEEL WEIGHS 40KGS. HANDLE WITH CARE WHEN MOVING OR LIFTING. IT IS RECOMMENDED THAT TWO PEOPLE HANDLE THIS WHEEL.
- ⚠ ENSURE LONG HAIR AND LOOSE CLOTHING ARE SECURED AND UNABLE TO BE CAUGHT UP IN THE ROTATING MECHANISM OF THE WHEEL.
- ⚠ ENSURE MACHINE IS OPERATED ON A FLAT AND LEVEL SURFACE.
- ⚠ ENSURE CHILDREN ARE NOT LEFT UNATTENDED NEAR THE MACHINE.
- ⚠ ENSURE TOOLS AND ANY SMALL PARTS ARE OUT OF REACH OF CHILDREN.
- ⚠ STOP OPERATION OF THE MACHINE IF SMOKE IS DETECTED OR THERE ARE UNUSUAL NOISES.
- ⚠ DO NOT INSERT HANDS OR OBJECTS INTO OPENINGS OR MOVING PARTS.
- ⚠ REPAIR OR MODIFICATION OF THE WHEEL IS PROHIBITED.

SET UP INSTRUCTIONS

- 1.POSITION WHEEL ON ITS SIDE WITH FOOT PEDAL SHAFT FACING UPWARDS.
2. CUT CABLE TIES IN ORDER AS INDICATED BELOW.

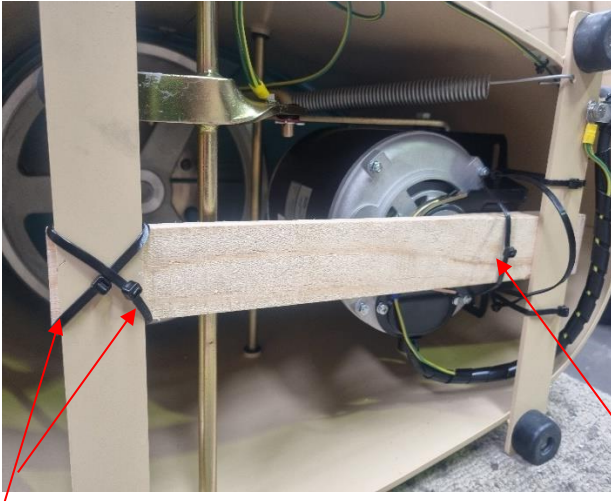

1.CUT THESE TWO CABLE TIES FIRST.

2.CUT THIS CABLE TIE NEXT.

3. TAKE HOLD OF THE LARGE LOOSE CABLE TIE, PULL TO TENSION AND THEN CUT THE TWO CABLE TIES SECURING MOTOR AND GENTLY RELEASE TENSION.SEE BELOW.




- 4.FASTEN THE PEDAL TO THE SHAFT ON THE RIGHTHAND SIDE OF THE WHEEL USING A 10MM SPANNER ALIGNING THE PEDAL WITH THE FLAT ON THE SHAFT.




INSTALLATION AND REMOVAL OF BAT PINS


REMOVE BAT PINS USING 6MM ALLEN KEY.

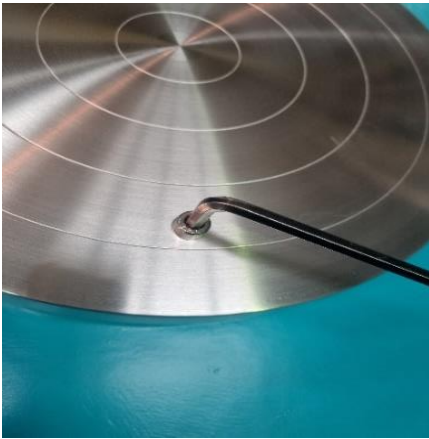

REPLACE BAT PINS WITH BLANKING PLUGS USING A 4MM ALLEN KEY.

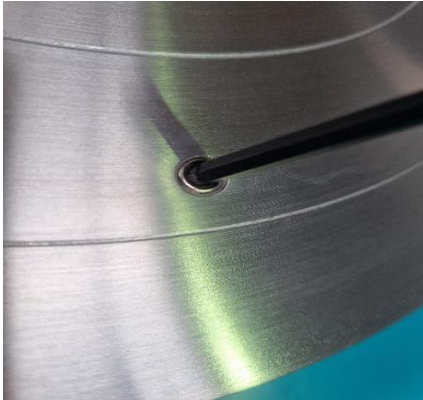

BLANKING PLUGS SIT JUST BELOW FLUSH WITH THE WHEELHEAD.

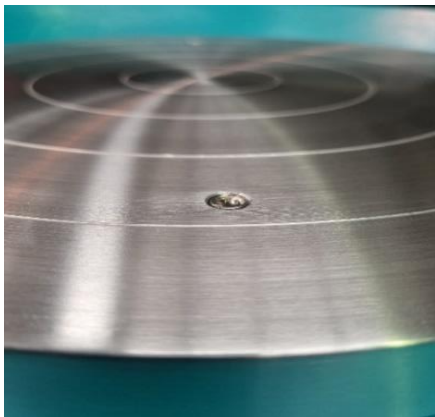

THANK YOU FOR PURCHASING A VENCO POTTERY WHEEL AND SUPPORTING
AUSTRALIAN MANUFACTURING.